MMX-4X4CAT-150M Q-SYS Plugin Guide

For Q-SYS Designer · Plugin version 1.0.6

The KanexPro MMX-4X4CAT-150M plugin lets a Q-SYS system control the MMX-4X4CAT-150M over the network. It talks to the unit's own control port (TCP 8000): no other KanexPro software and no RS-232 cable are needed. Every control has a pin, so it can be wired to UCI buttons, logic and scripts like any Q-SYS control, and the plugin reads the unit back so changes made on its front panel, remote or web page show in Q-SYS.

> **Before you start —** the Q-SYS Core must reach the MMX-4X4CAT-150M on TCP port 8000. Give the unit a fixed IP address (or a DHCP reservation).

TABLE OF CONTENTS

1. What the plugin does
2. Before you start
3. Install the plugin
4. Properties
5. The plugin in Q-SYS Designer
6. Controls
7. Status
8. Troubleshooting

1. WHAT THE PLUGIN DOES

It controls: source, HDMI picture, HDBaseT picture, power, presets, save, screen, show this output, remote.

It reads back: signal, connected, power, EDID, front panel locked.

Settings that only the unit's own web page has (its network, logins and firmware) stay on that page.

2. BEFORE YOU START

- ✓ Q-SYS Designer on a Windows computer, and a Q-SYS Core.
- ✓ The MMX-4X4CAT-150M on the same network as the Core, or routed to it, with TCP port 8000 open between them.
- ✓ The unit's IP address (front panel or its own web page).

3. INSTALL THE PLUGIN


1. Download **KanexPro-MMX-4X4CAT-150M-QSYS-1.0.6.zip** from the MMX-4X4CAT-150M page on kanexpro.com (Resources) and unzip it.
2. Copy `KanexPro-MMX-4X4CAT-150M.qplug` into `Documents\QSC\Q-Sys Designer\Plugins` on the Q-SYS Designer computer, or drag the file onto Designer's window.
3. Restart Q-SYS Designer. The plugin appears in Schematic Elements under **Plugins > KanexPro**.
4. Drag it into the design, select it and set its properties (section 4).
5. Save the design to the Core and run it. The plugin connects by itself and shows its state on its Status control.

> **One plugin per unit —** for two MMX-4X4CAT-150M units, add the plugin twice and give each its own IP address.

4. PROPERTIES

PLUGIN PROPERTIES	
IP Address	The MMX-4X4CAT-150M's address on the control network. Empty by default.
Port	8000 (TCP), the unit's control port. Change it only if the unit's own web page was set to another port.
Poll Interval	How often, in seconds, the plugin reads the unit back. Default 10; 0 reads it only after a change from Q-SYS.

5. THE PLUGIN IN Q-SYS DESIGNER

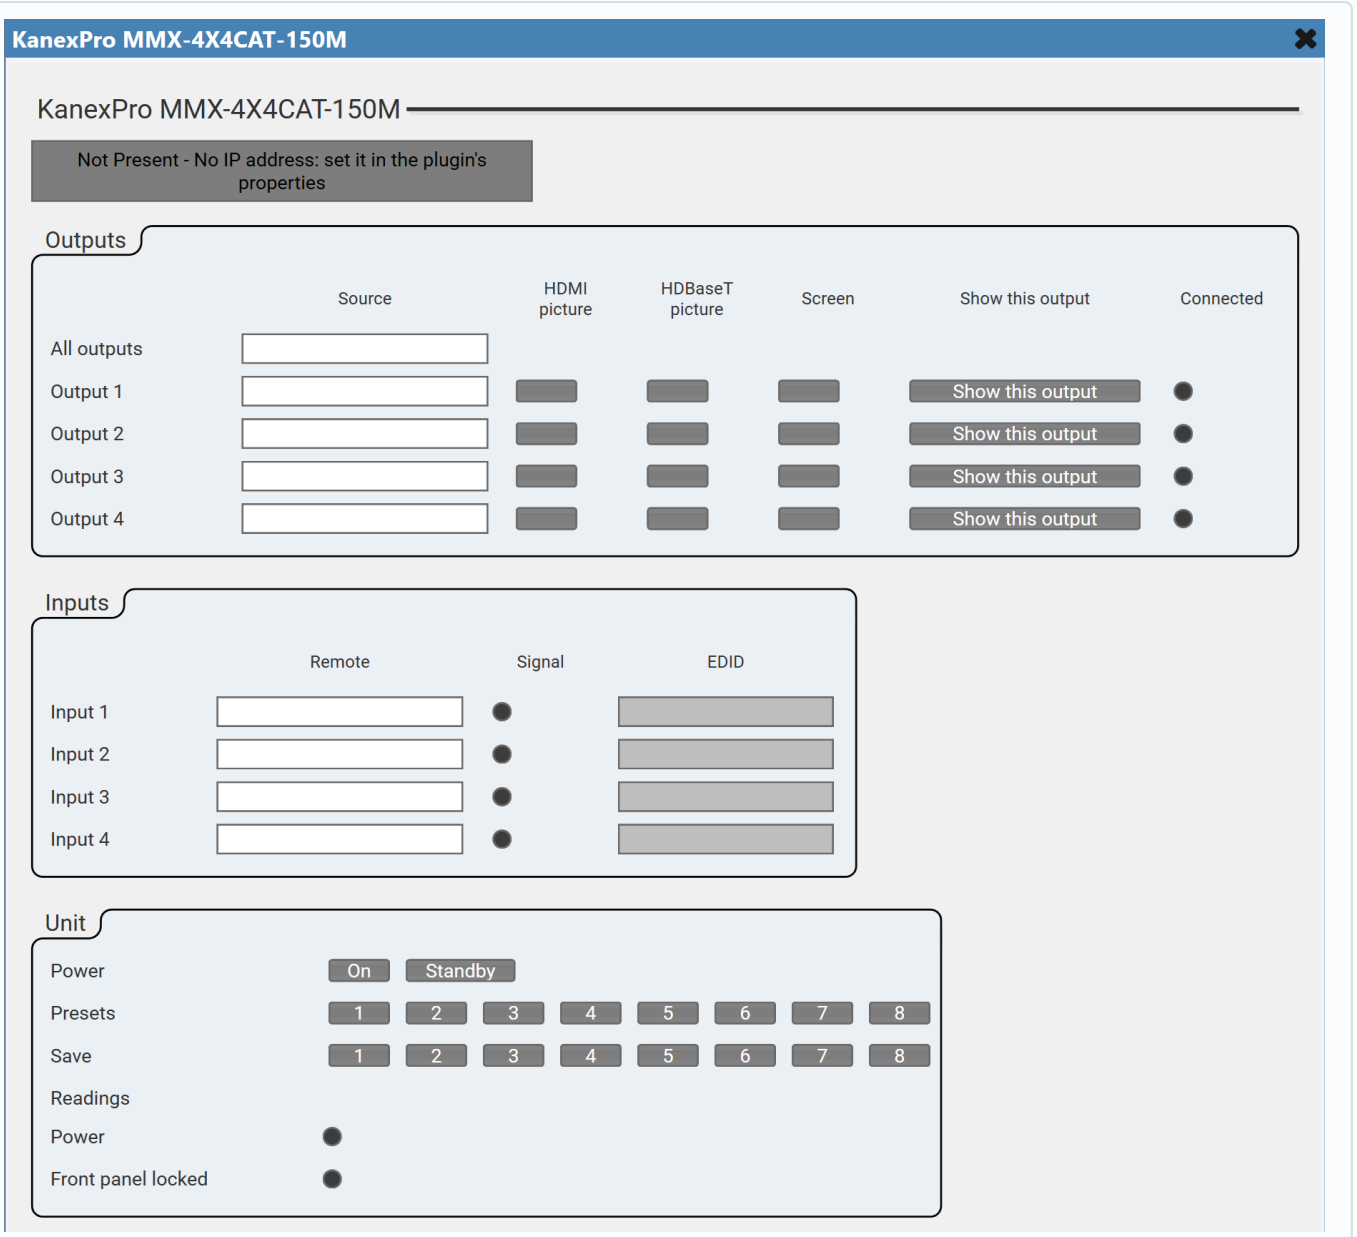

The MMX-4X4CAT-150M plugin's control panel in Q-SYS Designer

6. CONTROLS

58 controls. Where a control is repeated for each input or output, it is listed once.

#	Control	Where	What it does
0	**Status**	the plugin	Shows whether the plugin is connected to the unit, and why not (section 7).
1	**Source (all outputs)**	each output	Sends one input to every output at once.
2	**Source**	each output	Picks the input this output shows.
3	**HDMI picture**	each output	Turns the HDMI picture on or off on each output.
4	**HDBaseT picture**	each output	Turns the HDBaseT picture on or off on each output.
5	**Power**	buttons 1 to 2	On: turns the unit on. Standby: puts the unit in standby.
6	**Presets**	buttons 1 to 8	Recalls that preset.
7	**Save**	buttons 1 to 8	Saves the unit's current settings as that preset.

8	**Screen**	each output	Turns the screen on or off on each output. Sent to the screen on that output's HDMI port (CEC).
9	**Show this output**	buttons 1 to 4	Show this output: show this output.
10	**Remote**	each input	Sets the remote on each input. Choices: Power on; Power off; Play; Pause; Stop, and 3 more.
11	**Signal**	each input	Lit when the unit reports signal on that input.
12	**Connected**	each output	Lit when the unit reports connected on that output.
13	**Power**	the unit	Lit when the unit reports power.
14	**EDID**	each input	Shows the unit's EDID for each input.
15	**Front panel locked**	the unit	Lit when the unit reports front panel locked.

7. STATUS

STATUS CONTROL	
OK (green)	Connected to the unit and reading it back.
Initializing (blue)	Connecting. It tries again every few seconds by itself.
Fault (red)	Not connected, with the reason: the unit does not answer, or the connection was refused or closed.
Compromised (orange)	Connected, but the unit refused the last change. The text names it. The control returns to what the unit reports at the next read.
Not Present (grey)	No IP address is set in the plugin's properties.

8. TROUBLESHOOTING

The Status control shows Fault and it does not connect.
Check the IP address: find the unit's address on its front panel or its own web page and compare it with the plugin's IP Address property. A unit on DHCP may have moved; give it a fixed address or a DHCP reservation.

The address is right, but it still does not connect.
Check the network path. The Core and the unit must reach each other: the same network or VLAN, or a route between them. From a computer on the Core's network, the unit's web page should open at its address.

Could a firewall be blocking it?
Yes. A firewall or switch ACL between the Core and the unit must allow TCP port 8000 to the unit. Also leave the Port property at 8000 unless the unit's own web page was set to another port.

It connects, but a change does not happen.
The Status control shows Compromised and names the command the unit refused. The unit may be in standby: turn it on first.

Changes made on the unit do not show in Q-SYS.
Set Poll Interval above 0. Changes made on the unit's front panel, remote or web page then show within that many seconds.